




#0 General Overview

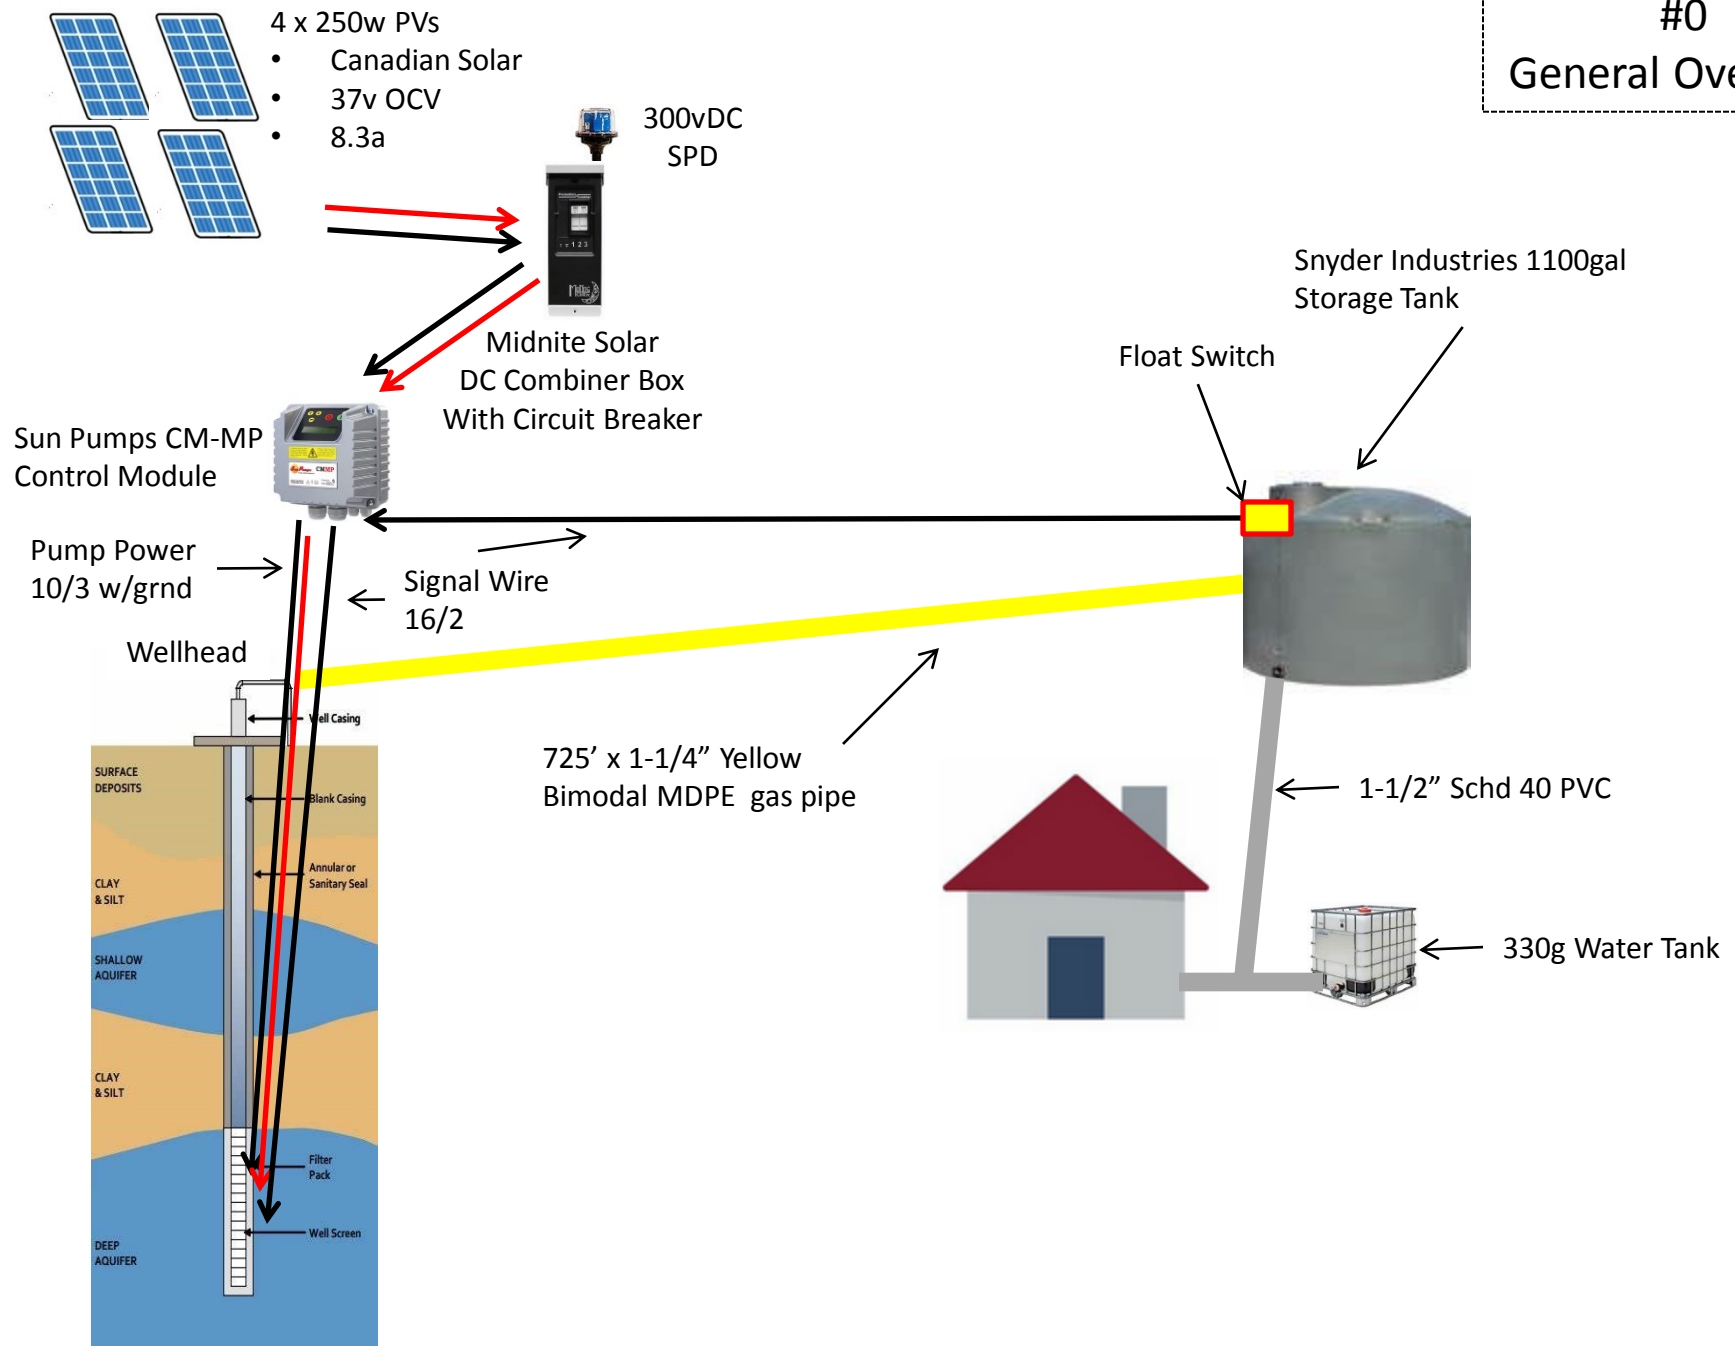


#1
Wellhead Plumbing

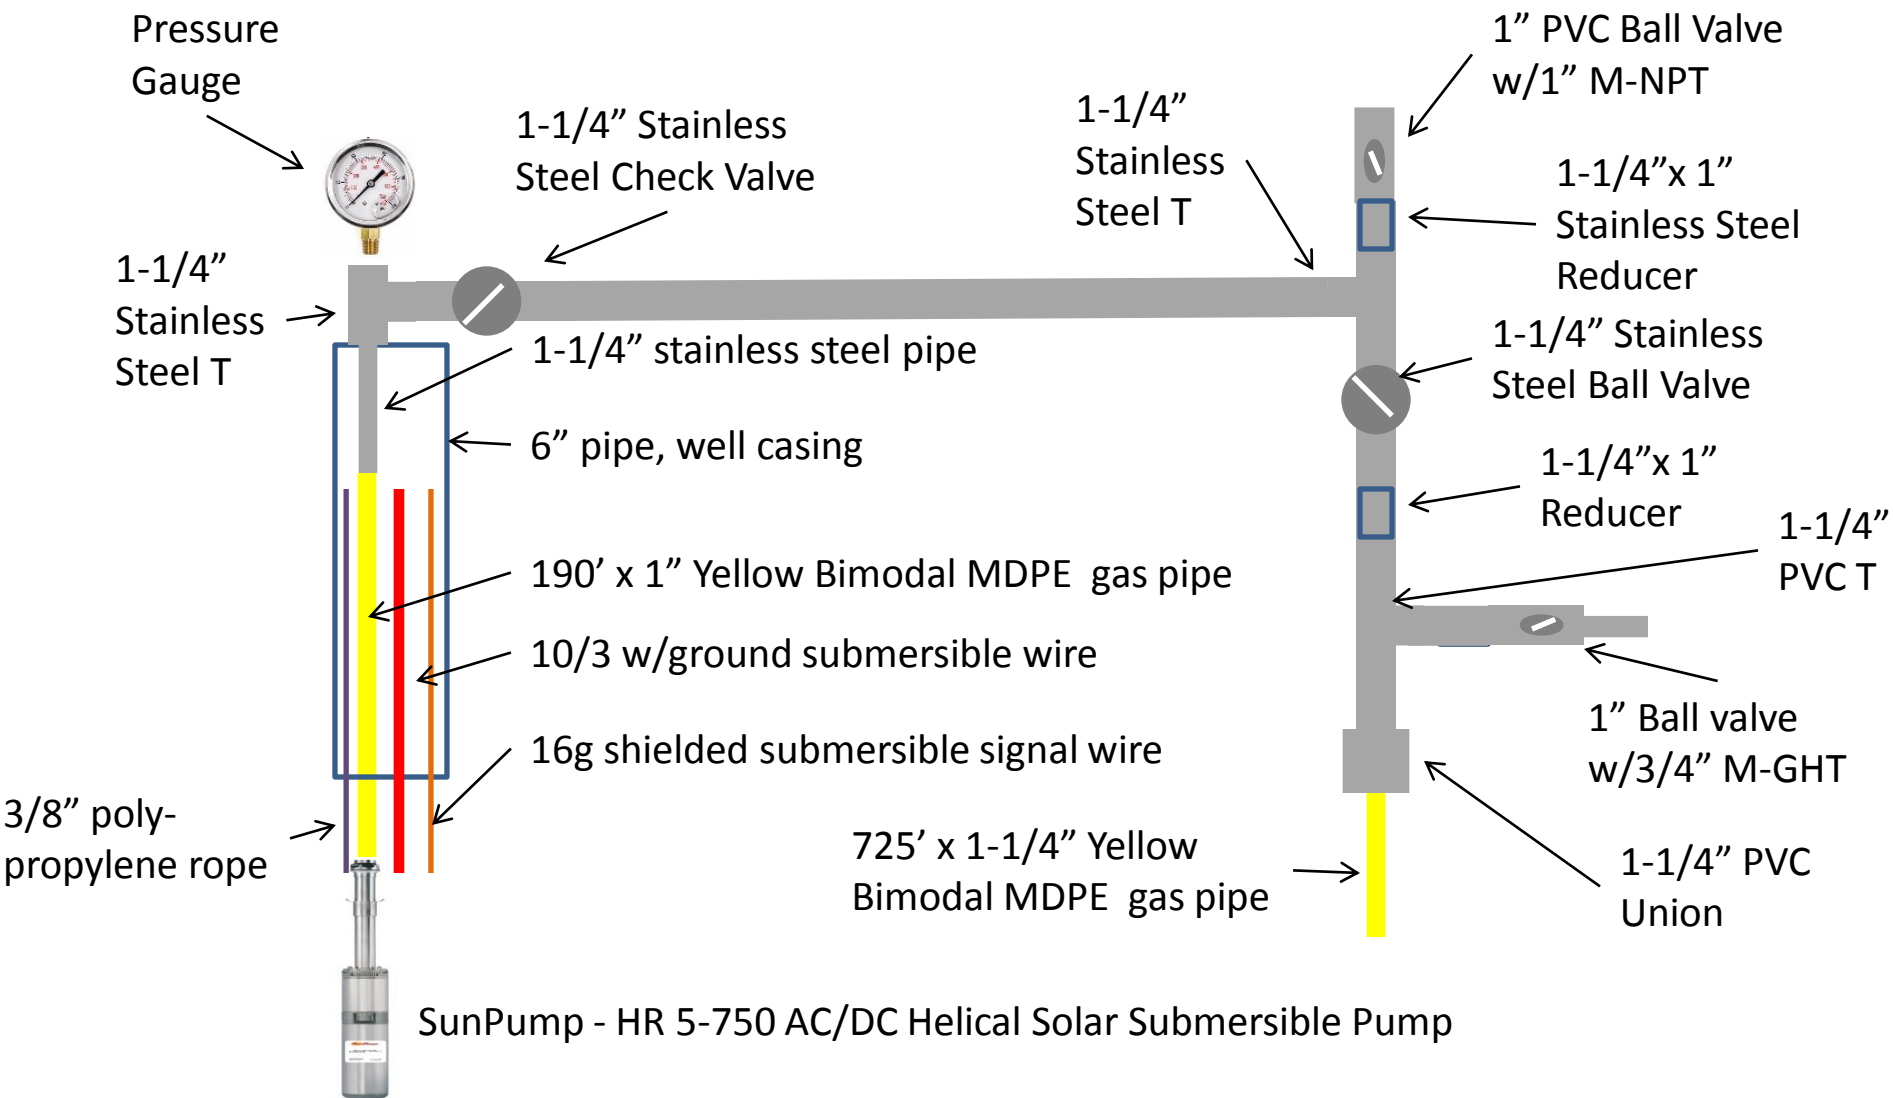

#2 Power & Wiring

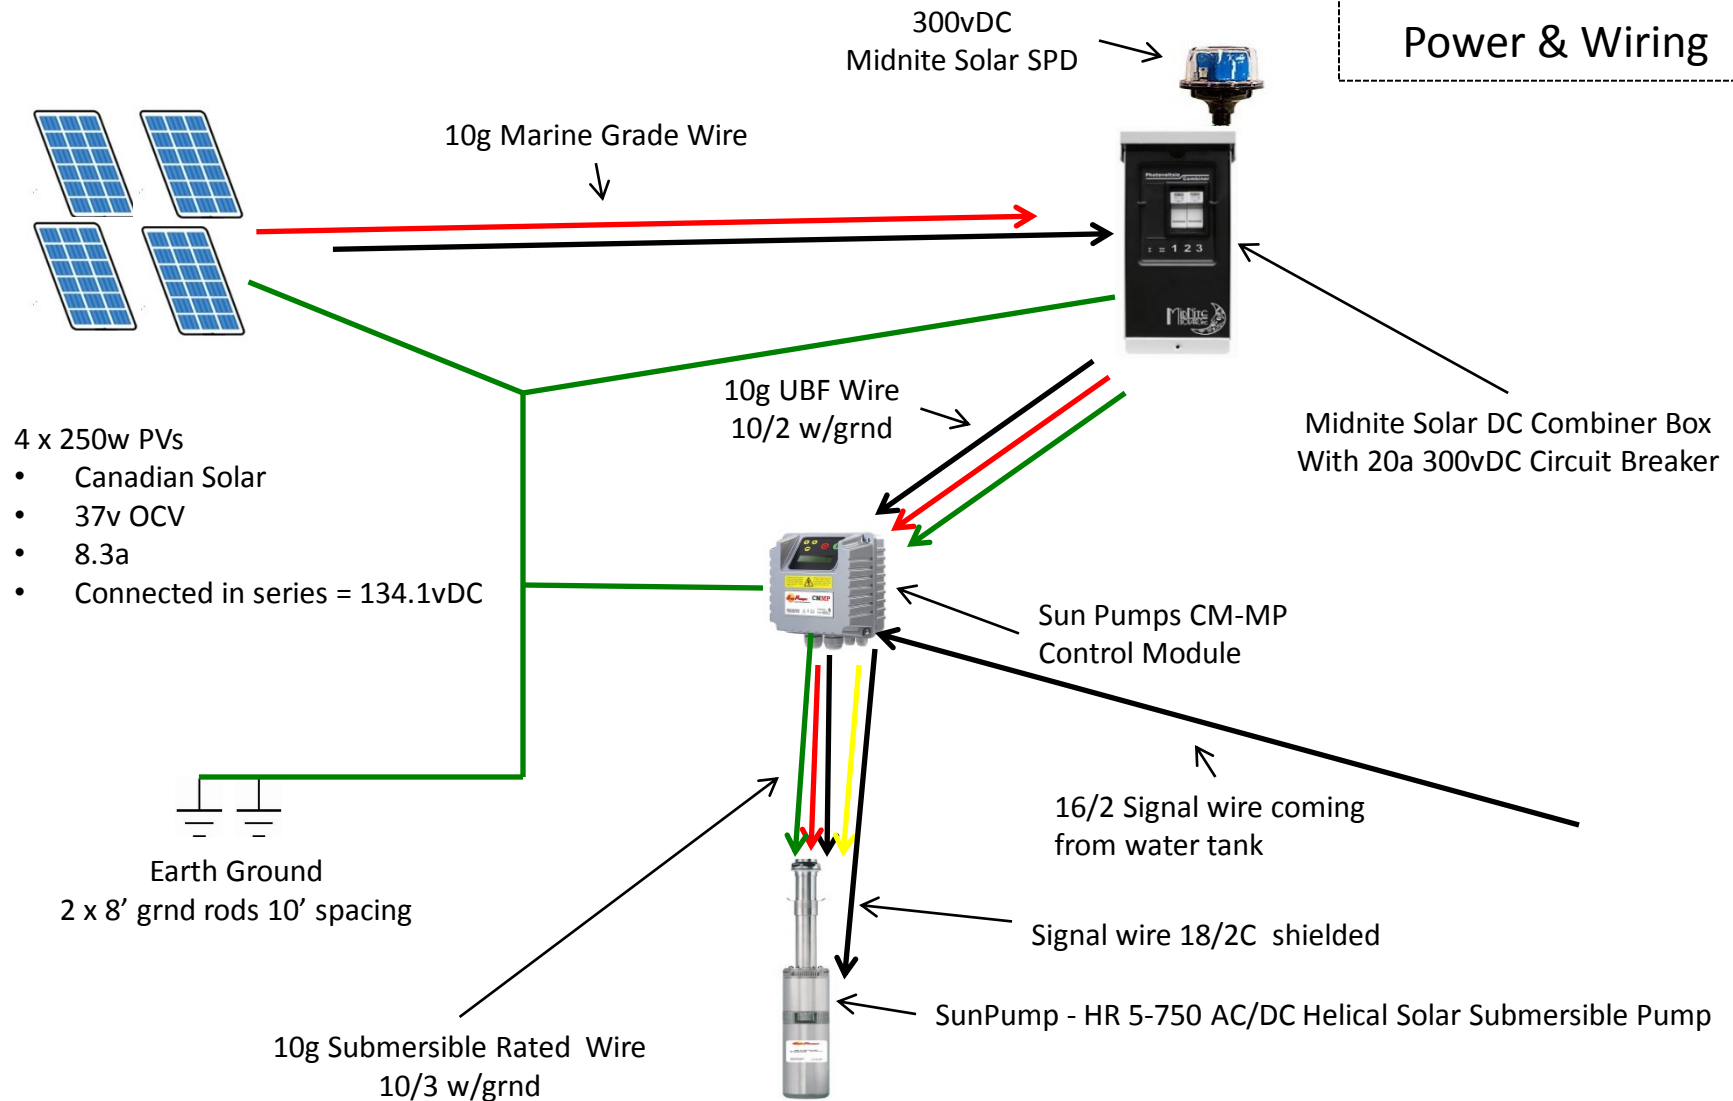

#3 Water Tank Plumbing & Wiring

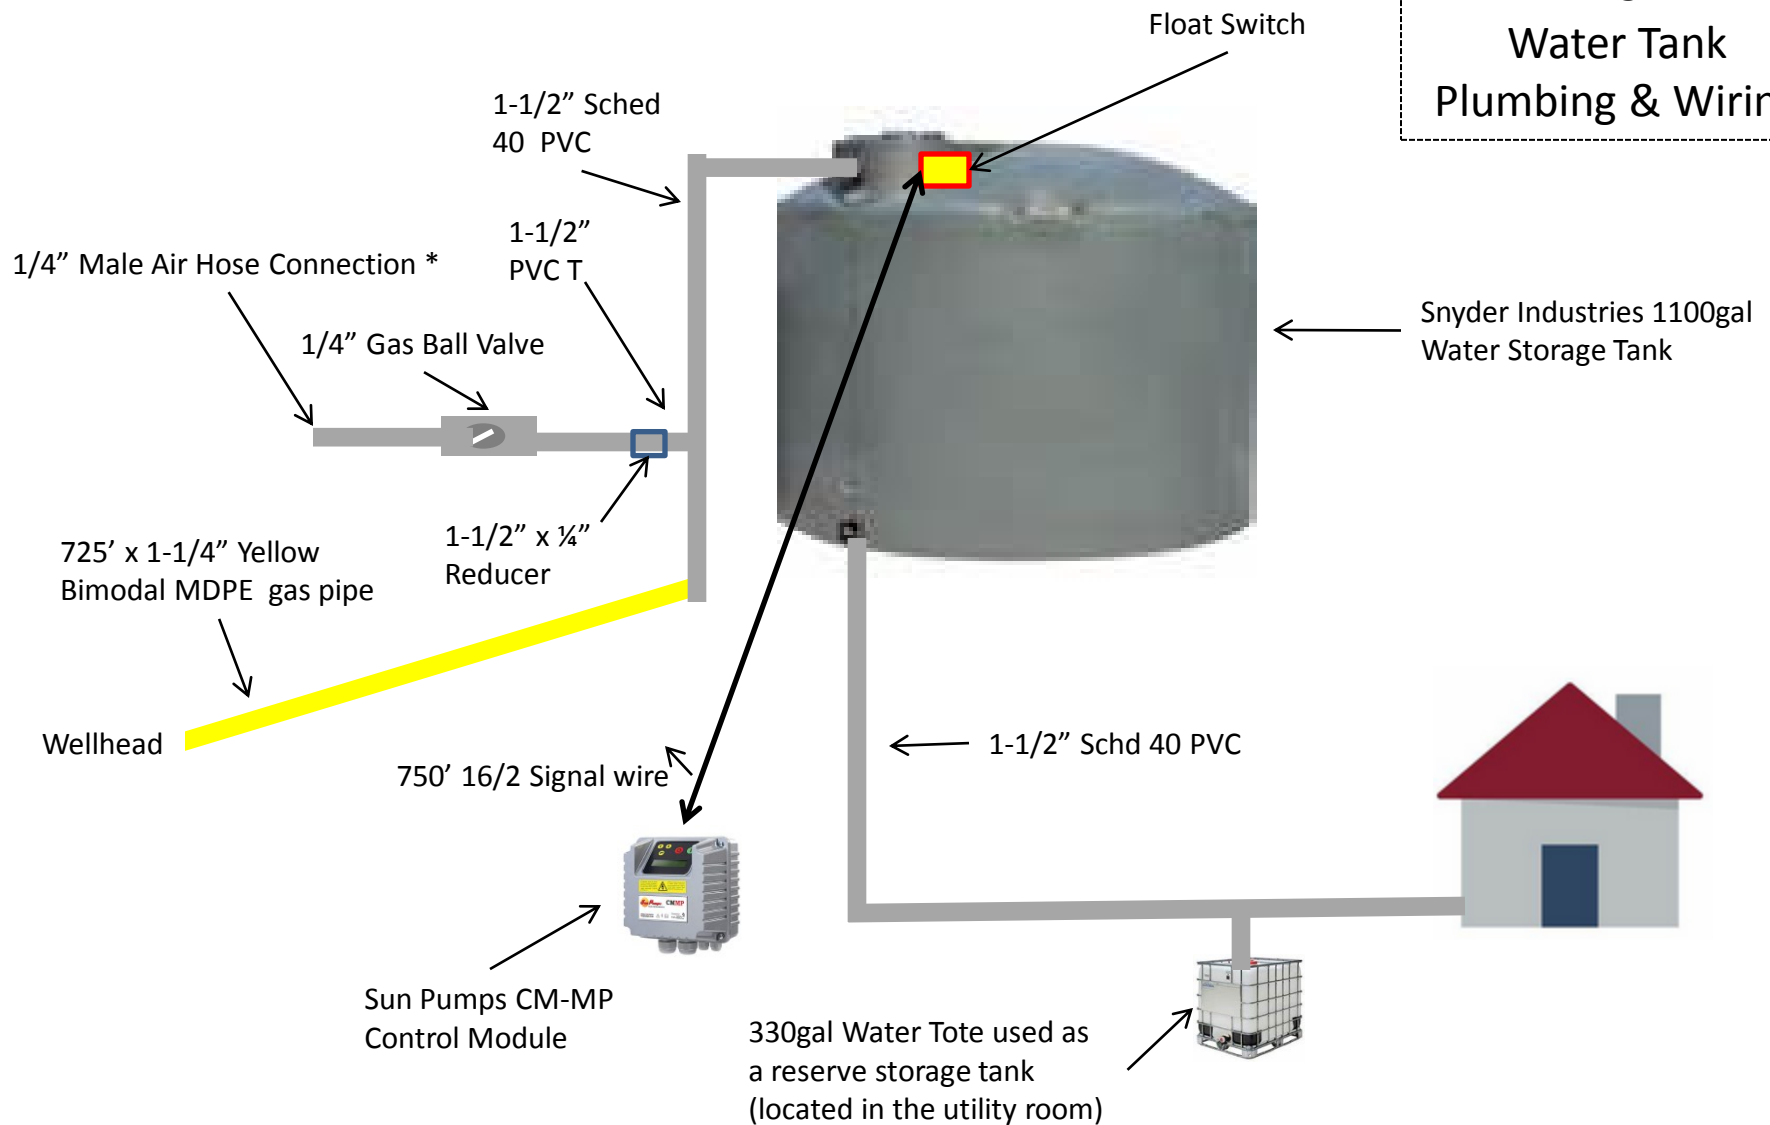

* 1/4" air hose connection is used to hook a compressor or portable air tank to. Then air can be injected into the supply line from wellhead to storage tank. That pushes the water out of the supply line at the GHT outlet at the well head.